



# INSTALLATION INSTRUCTIONS

FOR PRODUCT# RP-46, RP-53, RP-60

## STEP 1:

### WASH VEHICLE BEFORE INSTALLING


Installation area must be clean, dry and wax free. **USE PROVIDED 3M CLEANING PADS TO PREP BUMPER SURFACE.**



## STEP 2:

### HOW TO CENTER YOUR FLEXY GUARD

Before installing, find the raised notch located on the top of the product. This indicates the midpoint of the product. When centering your Flexy Guard line up the raised notch with the vehicle emblem or license plate. We recommend placing a small piece of masking tape to mark the center of the bumper.

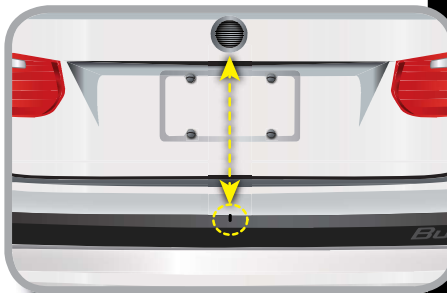

## STEP 3:

### HOW TO LEVEL YOUR FLEXY GUARD

For a level installation we recommend using masking tape to mark the desired install location and/or use a reference point on the rear bumper (i.e. reflectors) that you can use as a guide to make sure product is level.



## STEP 4:

### INSTALLING YOUR FLEXY GUARD

Peel off the red liner. Attach product to the bumper gently (Note: **DO NOT PRESS DOWN FIRMLY at this point** or it may be difficult to reposition). When you are satisfied with the positioning press down firmly all around the perimeter of the product to ensure a tight seal. Visually inspect to make sure the adhesive is in full contact with the bumper and there are no gaps.



## IMPORTANT INFORMATION

- Not recommended for use on unpainted bumpers.
- Installation recommended in temperatures warmer than 72°F.

If the temperature drops below 72°F please follow the **COLD WEATHER INSTALLATION** notes below.

## COLD WEATHER INSTALLATION



When the outside temperature is below 72°F, it is best to install Flexy Guard indoors, in a heated space because adhesives are less sticky when cold or when attaching to cold surfaces.

**Tip:** Keep Flexy Guard indoors or inside a heated car until ready to install. Use a hair dryer or heater to gently warm the product adhesive and vehicle bumper prior to installation.



**Do not wash vehicle or expose to rain for 24 hours after installation.**